

1

Setting Up the Color LaserWriter 12/660 PS



The Color LaserWriter 12/660 PS printer uses the same setup procedures as for the Color LaserWriter 12/600 printer with a few exceptions. This chapter describes those exceptions. To set up the printer, read this chapter first, then read Chapter 1 of the *Color LaserWriter 12/600 PS User's Manual*.

Choosing a place for the printer

When setting up the printer, be sure to follow these guidelines or your printer may not operate properly:

- Choose a flat, stable area with adequate room to give you access to all sides of the printer. The printer weighs approximately 110 pounds (approximately 50 kilograms). Make sure you place it on a desk or table that's strong enough to hold the weight.
- Don't lift the printer by yourself. Have at least one other person assist you.
- The area should be well ventilated and away from direct sunlight or sources of heat, cold, or humidity. Abrupt changes in temperature and extremely high or low humidity can adversely affect print quality.
- Unpack the printer in the location where the printer will be set up. Since the printer contains a fuser oil reservoir, it is important not to install the fuser oil bottle until the printer is located where it will be used.


WARNING The desk or table surface *must* be level. The back of the printer *must* be level with the front (or slightly higher—up to 1/2 inches [15 mm]) to keep oil inside the printer flowing properly. A level and round black rubber shims are included with the printer to help you set up the printer properly.

Leveling the printer

Follow the instructions on unpacking the printer in Chapter 1 of the *Color LaserWriter 12/600 PS User's Manual*. After removing the packing tape from the outside of the printer (step 4), you must level the printer before proceeding any further.


- 1 Remove the level and round black rubber shims from their package.**
- 2 Snap the level into its base.**
You may have to apply some pressure.
- 3 Open the printer's top cover.**

- 4 Place the level on top of the fuser to level the printer first from front-to-back, then from side-to-side.

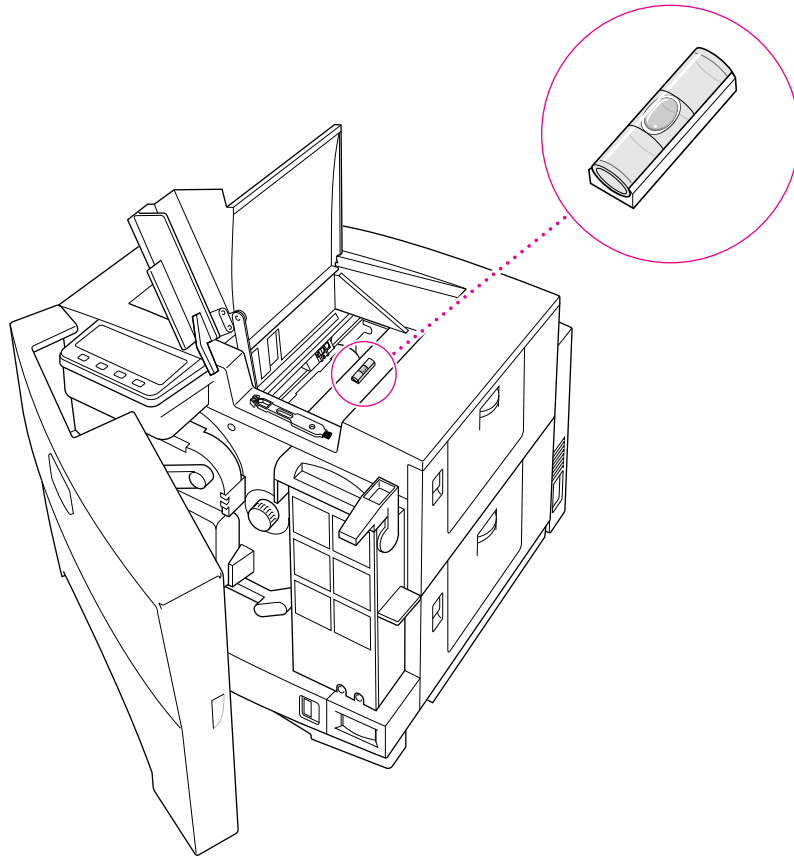

5 Place the shims under the printer's feet (as needed) to level the printer.


You might want to have one person tilt the printer up and another person place the shims underneath.

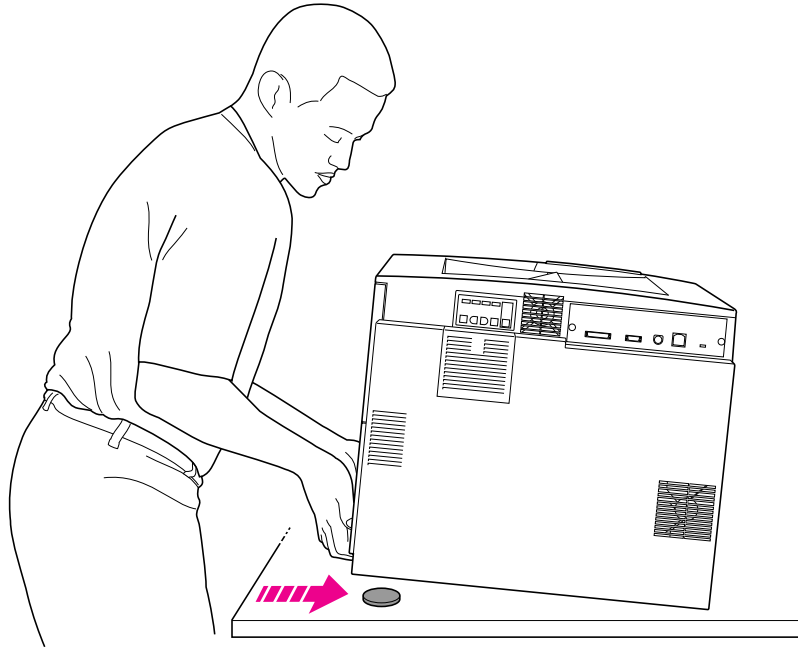


Removing the oil absorption sheets

After leveling the printer, remove the shipping spacers and oil absorption sheets from inside the printer.

- 1 Open the fuser access door and remove the two orange spacers and the oil absorption sheet from inside.

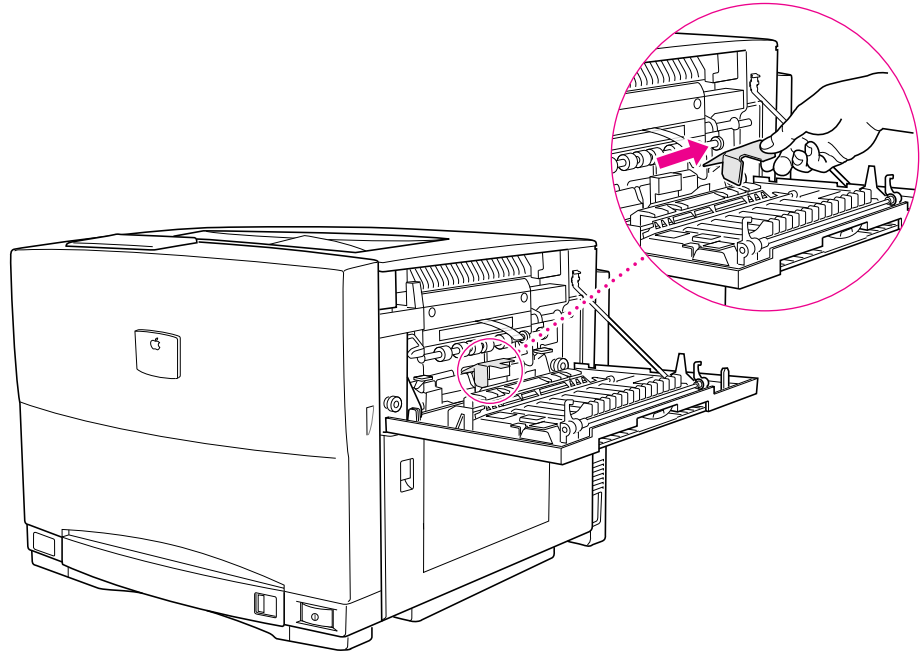

- 2** Open the fixing assembly and remove the oil absorption sheet from inside.

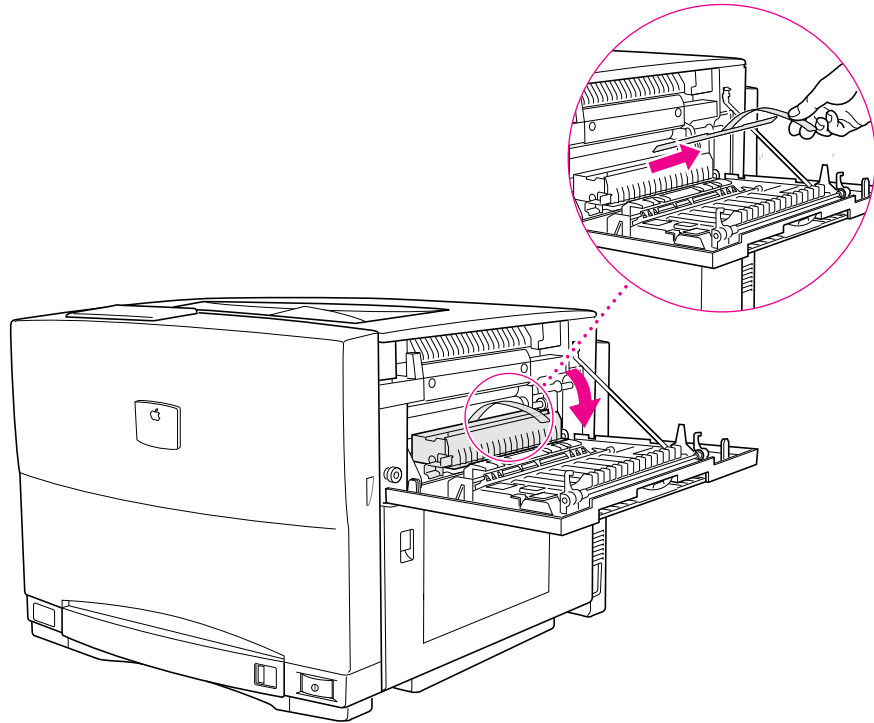

Additional information

Be sure to do the following when setting up the printer:

- Remove the shipping screw. The shipping screw is encased in an orange plastic sheath behind the front door. Put the shipping screw in a safe place in case you ever need to ship the printer to a new location.

WARNING You must remove the shipping screw. Otherwise, you might damage the printer.

- Keep the photoconductor level as you insert it into the printer. Inserting it at an angle may damage the photoconductor. (*Note:* Each photoconductor will yield 5,000 to 25,000 pages, depending on use of color per page.)
- Remove the orange tab and the sealing tape from each of the four toner cartridges before inserting them into the printer.

WARNING You must remove the orange tab and the sealing tape. Otherwise, you might damage the printer.