

No Shell Command to Eject CD-ROM Discs (9/95)

Article Created: 13 September 1995
TOPIC
Can I use a UNIX line command to eject a CD-ROM disc?
DISCUSSION
There is no shell command that will eject a CD-ROM disc under A/UX. The only way to eject a CD-ROM disc under A/UX is by dragging its icon to the Trash.
Support Information Services Copyright 1995, Apple Computer, Inc.
Keywords: <none></none>
=======================================
This information is from the Apple Technical Information Library.
19960215 11:05:19.00
Tech Info Library Article Number: 18563