

## AppleWorks: Problems with output wider than 80 columns

Customers are having difficulty printing AppleWorks files when lines in the file are greater than 80 columns long. This happens because the interface card adds a CR-LF after 80 columns.

To eliminate this problem:

- 1. Select the change printer specifications section of AppleWorks.
- 2. Select the desired printer and choose "6. Printer Codes".
- 3. Choose Characters per inch.
- 4. Select the spacing you want to set.
  - a. If the command to set your printer to 15 CPI is <ESC>Q, type <CTRL>I120N<ESC>Q. (Keep in mind that <CTRL>I means to hold the Control key down and press the I key, and <ESC> means press the key marked ESC).
  - b. The same setup will work for 17 CPI if 120 is replaced with 136
    (<CTRL>I136N<ESC>Q).

Apple Technical Communications

Keywords: <None>

\_\_\_\_\_

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 1125