



Tech Info Library

Laserjet Printer: Using it with AppleWorks (10/94)

Article Created: 22 July 1985

Article Reviewed/Updated: 18 October 1994

TOPIC -----

How can I print to my HP printer from AppleWorks?

DISCUSSION -----

In configuring Apple IIe to an H.P. Laserjet Printer, you will need the following equipment:

1. H.P. Laserjet Printer
2. Apple Super Serial Card
3. Male to Female Standard RS-232C Cable

Set the dip switches on the Super Serial Card as follows:

SW1:	1	2	3	4	5	6	7	SW2:	1	2	3	4	5	6	7
ON				X	X	X		ON	X			X	X		
OFF	X	X	X		X			OFF		X	X			X	X
	1	2	3	4	5	6	7		1	2	3	4	5	6	7

From AppleWorks main menu, choose:

5. Other Activities
7. Specify Information on your Printer
2. Add a Printer
11. Custom Printer

Specify the slot from which the printer will be accessed, and then make the following further specifications:

1. Needs line feed: YES
2. Accepts top of page: YES
3. Stop at end of page: NO
4. Platen width: 8
5. Printer codes:

a. Characters per inch (CPI)

	CPI	Code
1.	10	Escape (s10H
2.	12	Escape (s12H
3.	15	Escape (s15H
4.	17	Escape (s17H

b. Lines per inch (LPI)

	LPI	Code
1.	6	Escape &l6D
2.	8	Escape &l8D

c. Underlining: Choose 'Printer has start/stop underline commands'

--Begin: Escape &dD
--End: Escape &d@

d. Boldface

--Begin: Escape (s3B
--End: Escape (s0B

e. Subscript

--Begin: Escape &a+25V
--End: Escape &a-25V

f. Superscript

--Begin: Escape &a-25V
--End: Escape &a+25V

Article Change History:

18 Oct 1994 - Reviewed for technical accuracy, revised formatting.

Support Information Services

Copyright 1985-94, Apple Computer, Inc.

Keywords: <None>

=====
This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 1242