

Applesoft under ProDOS: Turn 80 columns off before slot commands

When you use Applesoft under ProDOS, you must turn off the 80-column firmware before issuing any slot command; failing to do so essentially hangs the system. You can turn off the 80-column firmware with ESC CTRL-Q in immediate mode or with PRINT CHR\$(12);CHR\$(21) from deferred mode. Apple Technical Communications

Keywords: <None>

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 1091