



# Tech Info Library

## LaserWriter 16/600 PS: Novell Frame Types (5/96)

Article Created: 30 May 1996

TOPIC -----

I am running a Novell Network, and have multiple frame types, 802.2 and 802.3. When I startup my LaserWriter 16/600ps it will only see part of my network. I have isolated it down to the frame type. I have concluded that it switches frames types randomly. Is there a way to manually set it? Is it possible to lock this setting in?

DISCUSSION -----

The LaserWriter 16/600 PS sends a request to the network at startup. Whichever server responds first determines the frame type the printer will use. There is no software that allows you to switch or manually set this option. You may want to contact Novell for suggestions on using the same frame type across your network.

This article provides information about a non-Apple product. Apple Computer, Inc. is not responsible for its content. Please contact the vendor for additional information.

The Tech Info Library article titled "Locating Vendor Information" can help you search for a particular vendor's address and phone number.

Copyright 1996, Apple Computer, Inc.

Keywords: kwindows

=====

This information is from the Apple Technical Information Library.

19960531 08:19:30.00

Tech Info Library Article Number: 19891