

AppleTalk Remote Access: Status Window

Article Created: 15 October 1991 Article Last Reviewed: Article Last Updated:
TOPIC
What is the Status Window?
DISCUSSION
This window shows the current status of AppleTalk Remote Access. It uses the following messages:
- "Idle" when no connections are present or being attempted
- "Waiting to answer incoming call" when ready to accept calls
 "Waiting for call back" or "Dialing" to show the stage of making connection or answering a call Copyright 1991 Apple Computer, Inc.
Keywords: <none></none>
This information is from the Apple Technical Information Library.
19960215 11:05:19.00
Tech Info Library Article Number: 8946