

AppleShare: Disk is Unreadable (5/94)

Article Created: 18 May 1994

TOPIC -----

When I mount a volume through AppleShare, I get the message that the disk is unreadable. What is going on?

DISCUSSION -----

It is very likely that there is an old version of DOS Mounter (prior to 3.0) in your System folder. Remove it, restart and try again. Contact Dayna for any updates to DOS Mounter.

Support Information Services Copyright 1994, Apple Computer, Inc

Keywords: <None>

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 15383