

## Network Server: Status Panel Number Descriptions (5/96)

Article Created: 21 May 1996

TOPIC ------This article lists the more common values on the front status panel of the Network Server 500 and 700. DISCUSSION ------LCD System Action \_ \_ \_ \_\_\_\_\_ 510 The system has started the configuration manager. 511 The configuration manager has completed. 517 The system is attempting to mount the / (root) and /usr file systems. 538 The configuration manager is passing control to a configuration method 539 The configuration method has completed. 551 The system is attempting to varyon the root volume group. 553 The system has completed phase one of the boot process. 591 The system is configuring the Logical Volume Manager (LVM). 593 The system is configuring the low-function graphics terminal. 594 The system is configuring the rendering context manager. 704 The system is configuring a SCSI disk drive. 723 The system is configuring a CD-ROM or other SCSI device. 727 The system is configuring an asynchronous device. 731 The system is configuring a pseudo TTY. The system is configuring the system planar (motherboard). 811 The system is configuring the standard I/O adapter. 812 814 The system is configuring the NVRAM. The system is configuring the standard keyboard adapter. 821 823 The system is configuring the standard mouse adapter. 826 The system is configuring on-serial port 1. 828 The system is configuring the standard floppy disk adapter. 831 The system is configuring serial port 2. 868 The system is configuring the integrated SCSI adapter. 874 The system is configuring the graphics subsystem adapter. 921 The system is configuring a keyboard. 925 The system is configuring a mouse. The system is configuring a 3.5-inch diskette drive. 935 9002 The system is configuring a SCSI-2 adapter.

Copyright 1996, Apple Computer, Inc.

Keywords: ktable, knts

\_\_\_\_\_

This information is from the Apple Technical Information Library.

19960522 08:06:38.00

Tech Info Library Article Number: 19831