



Tech Info Library

Network Server 500 or 700: Configure PPP Server in AIX (1/97)

Article Created: 28 January 1997

TOPIC -----

This article describes configuring a simple PPP Server in AIX 4.1.4 on an Apple Network Server 500, or 700.

DISCUSSION -----

To configure a simple PPP Server on an Apple Network Server 500 or 700 running AIX 4.1.4, follow the steps below:

Step 1

Create a tty for your serial port with login enabled, rts or cts flow control, and a serial port rate at 38400 for modem that are over 14400 kbps. Use smitty devices or type this shell command:

```
mkdev -c tty -t 'tty' -s 'rs232' -p 'sa0'
```

This command will create the tty on serial port 1.

Step 2

Add this line in your Devices file in the "/etc/uucp" directory.

```
Direct tty0 - any direct
```

Be sure to save the file with the "w!" in vi because the file is read only and then exit with "wq" when finished.

Step 3

Type smitty ppp and go to link control configuration, go to add a link configuration.

```
1 server
0 client
0 demand ( available only on AIX 4.2)
1 interface
1 hdlc
```

Leave the rest at default values.

Step 4

Go to smitty addpppserver

- a) fill in local address (your local system IP address)
- b) starting remote address (your remote address for the peer)
- c) number of addresses (1)

Step 5

Start the PPP subsystem through smitty or type

```
/etc/ppp/mkppp -start 'both'
```

Step 6

When you login, the .profile should contain:

```
exec /usr/sbin/pppattachd server
```

Copyright 1997, Apple Computer, Inc.

Keywords: knts,kalley

=====

This information is from the Apple Technical Information Library.

ArticleID: TECHINFO-0020894

19970129 10:07:13.00

Tech Info Library Article Number: 20894