



# Tech Info Library

## AppleShare PC 2.0.X Requires AppleTalk Phase 2

Article Created: 11 April 1991

### Article Change History

-----  
08/21/92 - REVIEWED

- For technical accuracy.

### TOPIC -----

I am running AppleShare PC 2.0.1 and a 3Com Etherlink II Board (ThinWire) on an AST 486. When I load ABOTH, I can only see Phase 2 Zones, because our K-Boxes are filtering out Phase 2 traffic. Is there any way I can see our Phase 1 zones the same way I can on my Macintosh using the old EtherTalk Phase 1 drivers? I don't know when we plan to migrate to Phase 2.

### DISCUSSION -----

You need AppleTalk Phase 2 for AppleShare PC 2.0 environments using Ethernet or Token Ring networks. If you could attach to a LocalTalk network, then you could use Phase 1. Otherwise, upgrade your present network to Phase 2 as soon as possible.

Copyright 1991 Apple Computer, Inc.

Keywords: <None>

=====  
This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 7503