



# Tech Info Library

## ImageWriter Blows 5 AMP Fuse

This article last reviewed: 28 March 1988

PROBLEM DESCRIPTION: ImageWriter continues to blow 5 amp fuses on the CPU PCB.

BEFORE YOU START: Familiarize yourself with ImageWriter Technical Procedures.

CAUSE: Print head might be shorted.

CURE: Try the following steps and refer to ImageWriter Technical Procedures when needed:

1. Remove and replace the print head.
2. Replace the 5 amp fuse with a known good one.
3. Reassemble the printer.
4. Run the built-in "Self-Test".
5. If the 5 amp fuse blows again, refer to ImageWriter Technical Procedures for more information on troubleshooting.

Copyright 1988, Apple Computer, Inc.

Keywords: hts

=====  
This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 2016