



Tech Info Library

LisaWrite: Preview Pages

With Preview Pages comes a variety of display problems (including showing the Page ruler and printing):

- pieces of text are displayed in the wrong place,
- the elevator disappears,
- text disappears,
- you cannot print a page in a specified range,
- LisaWrite doesn't display the document past page three.

If you are having such display problems, just avoid using Preview pages or the page ruler. If you are having problems printing a specific page, have that page displayed in the window before you print, or select a larger range. If a large portion of your document is gone, remember DON'T PANIC. That portion of your document is still there; it's just not being displayed. Select Don't Preview Pages, then Save and Put Away the document. When you open the document, it will come back whole.

Copyright 1984, Apple Computer, Inc

Keywords: <None>

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 364