

Macintosh TV: If You Forget Your Password (11/93)

Article Created: 1 November 1993
TOPIC
If you create a password to lock out the TV mode of your Macintosh TV, and then forget the password, here's what to do.
DISCUSSION
1) Find the file named "TV Preferences" and drag it into the Trash.
2) Restart your Macintosh TV.
3) After the computer starts up, the TV Setup control panel will create a new "TV Preferences" file.
4) Set up the channels, name them, and create a new password if you wish. Copyright 1993, Apple Computer, Inc.
Keywords: <none></none>
This information is from the Apple Technical Information Library.
19960215 11:05:19.00 Tech Info Library Article Number: 13826