



Tech Info Library

At Ease 2.0.3: Corrects AppleCD 300 Plus Ejection Problem (8/95)

Article Created: 21 September 1994

Article Reviwed/Updated: 14 August 1995

TOPIC -----

The read me file that comes with the AppleCD 300 Plus drive states:

WARNING: If you shut down your computer before you eject a disc while you are using At Ease, the tray of the CD-ROM drive opens and then closes immediately. If you attempt to remove the disc as the tray opens or closes, you may damage the disc or the tray of the CD-ROM drive. (To remove a disc from the CD-ROM drive after you have shut down your computer: Start up your computer, then choose the Eject command from the Special Menu. Remove the disc and close the tray by pushing it in or pressing the Open/Close button. Then you can shut down your computer again.)

Does this problem occur in At Ease 2.0.3?

DISCUSSION -----

With At Ease 2.0.3, this is no longer a problem. When a CD-ROM is inserted into an AppleCD 300 Plus, and you choose Shut Down from the Special menu, the CD is left in the drive. You can still choose Eject from the Special menu and the CD is ejected from the AppleCD 300 Plus drive.

Article Change History:

14 Aug 1995 - Corrected minor typo.

08 Aug 1995 - Added keyword; reviewed and reformatted article.

Support Information Services

Copyright 1994-95, Apple Computer, Inc.

Keywords: katease

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 16348