## HyperCard Sound and After Dark Screen Saver (5/93)

Article Created: 24 June 1991
Article Reviewed/Updated: 27 May 1993
TOPIC
This article describes two small anomalies involving HyperCard and After Dark.
DISCUSSION
The screen saver After Dark v. 2.0, runs silently if HyperCard is the application that's open when After Dark kicks in. This is because HyperCard takes control over sound while it is running.
After Dark, v.2.0u (for System 7) may also cause the cursor to change to After Dark's "never sleep" icon. This has been reported to Berkeley Systems.
additional search term: AfterDark
This article is adapted from the Claris Tech Info database. Copyright 1993, Apple Computer, Inc.
Keywords: <none></none>
=======================================
This information is from the Apple Technical Information Library.
19960215 11:05:19.00
Tech Info Library Article Number: 14250