



Tech Info Library

LaserWriter Driver 8.x: Tray Switching Option (2/96)

Article Created: 20 May 1993

Article Reviewed/Updated: 23 February 1996

TOPIC -----

I'm using the LaserWriter 8.x driver. When I choose "Print" from the File menu, a Print Options Dialog box appears. I get several choices, such as FinePrint, PhotoGrade and, TraySwitch. Can you explain "TraySwitch"?

DISCUSSION -----

The "TraySwitch" option allows the printer to automatically switch to the other paper trays when the current tray runs out of paper. Thus, between the 250-sheet paper cassette and the 100-sheet multipurpose tray of a LaserWriter Pro, you can print 350 sheets without having to reload paper.

Here are the settings you can select from the TraySwitch pop-up menu:

- TraySwitch: Printer's Default
 - does not change the current setting in the printer.
- TraySwitch: True
 - enables trayswitching
- TraySwitch: False
 - disables trayswitching

By the way, this option is only available if the printer you are using supports it.

Article Change History:
23 Feb 1996 - Corrected minor typographical errors.
Copyright 1993-96, Apple Computer, Inc.

Keywords: <None>

=====
This information is from the Apple Technical Information Library.

19960226 16:03:23.00

Tech Info Library Article Number: 12167