

System 7: Disk Drive Activity Light

Article Created: 6 June 1991

Article Change History ------08/18/92 - REVIEWED

For technical accuracy.

TOPIC -----

When running System 7 without virtual memory and during periods of no user activity, the disk drive becomes active for a few seconds. What causes the disk drive light to flash?

DISCUSSION -----

The light flashes because the Finder is busy updating. If you'd like this not to happen, turn the file system cache up, and the Finder won't need to update as often.

The disk drive light will also flash when File Sharing is turned on and other people are accessing the disk. Copyright 1991, Apple Computer, Inc.

Keywords: <None>

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 8135