



Tech Info Library

RAM Disk: Resizing or Deleting (2/95)

Article Created: 29 November 1994

Article Reviewed/Updated: 16 February 1995

TOPIC -----

This article describes how to resize or remove a RAM disk.

DISCUSSION -----

Step 1

Copy any files you want to save onto a hard disk or floppy disk.

Step 2

If you want to resize or remove a RAM disk, you need to first remove the items on it.

Step 3

Drag everything on the RAM disk to the Trash.

Step 4

Choose Empty Trash from the Special menu.

Step 5

Choose Control Panels from the Apple menu.

Step 6

Open the Memory control panel.

Step 7

Drag the lever to choose the percentage of available memory you want to use for your RAM disk.

Or click the Off button, if you want to remove the RAM disk.

Note:

You can't change the RAM disk setting while there are files on the RAM disk.

Step 8

Close the Control Panel.

Step 9

Choose Restart from the Special menu.

If you resized your RAM disk, a new RAM disk icon appears on the desktop when the computer restarts. If you removed your RAM disk, no icon appears.

Article Change History:

16 Feb 1995 - Changed keyword from and reviewed technical accuracy.

Support Information Services

Copyright 1994-95, Apple Computer, Inc.

Keywords: sys7,sys75

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 16810