



Tech Info Library

Energy Saver: Causes CD-ROM Discs To Stop Playing (8/96)

Article Created: 14 August 1996

TOPIC -----

When I play an audio CD-ROM disc on my Power Macintosh 9500 computer, they play for a while then stop. Then the AppleCD Audio Player resets to track 1, time 0:00. Why?

DISCUSSION -----

This is being caused by the Energy Saver control panel and will be fixed in a future system update.

Note:

This affects all PCI-based Power Macintosh computers, not just the Power Macintosh 9500 computer.

Workaround

=====

Step 1

Open the Energy Saver control panel.

Step 2

Deselect "Shutdown instead of Sleep".

Step 3

Close the Energy Saver control panel.

Copyright 1996, Apple Computer, Inc.

Keywords: kpci,sys75

=====

This information is from the Apple Technical Information Library.

19960815 07:35:41.00

Tech Info Library Article Number: 20287