

## **AppleShare Pro: Copy ... To Function Problem (6/93)**

Article Created: 23 June 1993

\* RESTRICTED: Apple Internal and Support Providers Only \* Not For General Public Release

TOPIC -----

A question regarding the new AppleShare Pro software on the Apple Workgroup Server 95. If you use the, 'copy "..." to', function in the Privileges Menu to copy a volume to a UNIX subvolume mounted in a mounting point, the calculation of the available disk space is done incorrectly. AppleShare Pro is using the values of the "/" (root) volume to calculate the available or needed disk space, not the values of the mounted subvolume. If you try to copy a volume with about 300MB used space to a mounted 500MB partition, AppleShare will not do it. Because on a 230MB disk used as root/usr slice 0 you have only about 30MB free after a complete installation of the A/UX system and that is the value AppleShare uses for the calculation. Is this a bug in the AppleShare Pro software?

DISCUSSION -----

This is a known bug in the Macintosh environment running under A/UX. The bug has been entered into the bug tracking system and should be fixed in the next release of A/UX (3.0.2). Copyright 1993, Apple Computer, Inc.

Keywords: <None>

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 12425