



Tech Info Library

LaserWriter Select: Jam LED Blinking w/No Paper Jammed (9/93)

Article Created: 16 September 1993

* RESTRICTED: Apple Internal and Support Providers Only *
Not For General Public Release

TOPIC -----

I have two LaserWriter Select printers, straight out of the box, that have the Paper Jam LED blinking although no paper is jammed. Reseating the toner cartridge has no effect.

DISCUSSION -----

The blinking jam LED is due to a misaligned spring on the Delivery Sensor Actuator, located on the fuser.

Push the actuator away from the sensor. The actuator should swing freely and come back to the sensor. If it doesn't, that means the spring on the actuator is misaligned. Due to the difficulty in getting to the spring, it is suggested to exchange the whole fuser.
Copyright 1993, Apple Computer, Inc.

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 13244