

LW Driver 8.1.1: Selecting Default Paper Tray (10/93)

Article Created: 20 October 1993

* RESTRICTED: Apple Internal and Support Providers Only * Not For General Public Release

TOPIC -----

Will the LaserWriter Driver 8.1.1 allow the user to select the paper tray of his/her choice as the default paper tray?

DISCUSSION -----

LaserWriter driver 8.1.1 adds some latitude in this area by providing an option to select either the 250-sheet or the 500-sheet cassette as the default paper tray. This feature can be accessed in the "Configure" dialog during printer Setup from the Chooser. Copyright 1993, Apple Computer, Inc.

Keywords: <None>

This information is from the Apple Technical Information Library.

19960215 11:05:19.00 Tech Info Library Article Number: 13672