

Macintosh Plus: Replace CRT with Power Supply (11/94)

Article Created: 14 May 1991 Article Reviewed/Updated: 10 November 1994

* RESTRICTED: Apple Internal and Support Providers Only * Not For General Public Release

TOPIC -----

I want to replace the connector and pins that are connected to the CRT/yoke assembly. These are the connectors that melt when the power supply burns up. The yoke assembly is still good, but the heat of the power supply weakens the pins' contact.

What are the part and pin numbers, manufacturer and tools needed to remove and crimp new pins on the wires?

DISCUSSION -----

Unfortunately, the individual parts are not available separately. In cases where the connector from a Macintosh Plus CRT cable is fused to the power supply, we advise you to replace BOTH the CRT and power supply because:

1) The CRT cable and connector are not available separately

 In many cases, the CRT is a contributing factor in a power supply failure. The CRT works immediately after replacing the power supply, but causes another failure within a short time (around six months).

Article Change History: 10 Nov 1994 - Reviewed for technical accuracy.

Support Information Services Copyright 1991-94, Apple Computer, Inc.

Keywords: hts

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 8243