



# Tech Info Library

## Personal LaserWriter: Status LED Codes (11/94)

Article Created: 29 August 1991

Article Reviewed/Updated: 10 November 1994

\* RESTRICTED: Apple Internal and Support Providers Only \*  
Not For General Public Release

TOPIC -----

I understand that the Personal LaserWriter will describe different error conditions by turning on or off different combinations of front panel LEDs.

DISCUSSION -----

### Personal LaserWriter LED Status Lights

Condition	Ready Light	Paper Out Light	Paper Jam Light
Ready	ON	OFF	OFF
Paper Cartridge Not Installed	OFF	ON	OFF
Paper Out	OFF	ON	OFF
Engine in Manual Mode	OFF	ON	OFF
Paper Jam	OFF	OFF	ON
Front Access Door Open	OFF	OFF	OFF
Toner Cartridge Not Installed	OFF	OFF	OFF
Printing	FLASHING	OFF	OFF
Engine Warm-up	FLASHING	OFF	OFF
Fuser Assembly Error	OFF	FLASHING ( Sync )	FLASHING ( Sync )

Laser Assembly Malfunction	OFF	FLASHING(Sync)	FLASHING(Sync)
Scanner Assembly Malfunction	OFF	FLASHING(Sync)	FLASHING(Sync)
I/O Board Failure	OFF	FLASHING(Toggle)	FLASHING(Toggle)

NT I/O Board Troubleshooting Table

Ready	Paper Out	Paper Jam	Action
ON	FLASHING	ON	Replace SIMM2
OFF	FLASHING	ON	Replace SIMM2
ON	FLASHING	OFF	Replace SIMM1
OFF	FLASHING	OFF	Replace SIMM1
ON	OFF	FLASHING	Replace the ROM SIMM. If two ROM SIMMs are installed and the problem still exists, replace the other ROM SIMM.
OFF	OFF	FLASHING	Replace the ROM SIMM. If two ROM SIMMs are installed and the problem still exists, replace the other ROM SIMM.

For other NT I/O Board status light configurations, replace the I/O Board.

Article Change History:  
 10 Nov 1994 - Reviewed for technical accuracy.

Support Information Services  
 Copyright 1991-94, Apple Computer, Inc.

Keywords: hts

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 8089