

PowerBook 500 series: MacTest Pro RAM Test (12/94)

Article Created: 08 December 1994 * RESTRICTED: Apple Internal and Support Providers Only * Not For General Public Release TOPIC ------When I boot MacTest Pro on any PowerBook 500 series computer, the RAM test and Destructive logic board tests are grayed out. What's wrong? DISCUSSION ------The MacTest Pro software will disable the RAM and Destructive logic board tests if AppleTalk is active. To enable the tests, follow this procedure: 1) Zap the PRAM in the PowerBook. 2) Boot from the internal hard drive or Disk Tools disk with extensions disabled. 3) Restart the PowerBook and boot from the appropriate MacTest Pro disk. If these procedures are followed, the RAM and Destructive logic board tests will be available for use. Support Information Services Copyright 1994, Apple Computer, Inc. Keywords: kpbook,hts This information is from the Apple Technical Information Library. 19960215 11:05:19.00

Tech Info Library Article Number: 16858