



Tech Info Library

Travelrama: Icon Missing from Desktop (11/95)

Article Created: 17 December 1993

Article Reviewed/Updated: 30 November 1995

TOPIC -----

Why can't I see the Travelrama icon on my Desktop?

DISCUSSION -----

Check your system for the following conditions:

- 1) Ensure that your CD-ROM drive is turned on and plugged into a live electrical outlet.
- 2) Ensure the CD-ROM drive is properly connected to your Macintosh computer's SCSI port (consult your CD-ROM drive's manual for instruction).
- 3) Ensure the CD-ROM drive's SCSI ID number does not conflict with another SCSI device's ID number (consult your CD-ROM drive's manual for further information).
- 4) Ensure all CD-ROM drivers are installed.
- 5) Turn on your CD-ROM drive before you turn on your Macintosh. If your CD-ROM drive is already turned on, restart your Macintosh.
- 6) Use another CD-ROM disc. This will narrow down the problem to either your system set-up or your CD-ROM disc.

Article Change History:

30 Nov 1995 - Corrected minor typo.

Support Information Services

Copyright 1993-95, Apple Computer, Inc.

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 14315