

Dell Crosswords: Removing puzzle data (4/94)

Article Created: 18 April 1994

TOPIC -----

Once a puzzle is completed in Dell Crosswords on a PCMCIA ROM card, how do you clear the puzzle so that it can be played again by another player?

DISCUSSION -----

The steps for removing data from a puzzle are listed below. You may want to erase the data to save internal memory space in addition to removing it to let someone else play the puzzle. You save internal memory space because the PCMCIA ROM card stores the solutions and scores on internal Newton memory.

Puzzle data can be removed by following these steps:

- Navigate to a puzzle pack screen which contains a list of available puzzles. The Dell Crosswords PCMCIA card comes with 13 different puzzle packages. The top of the screen displays "Contents of Dell CW Pack #Cx", where x is the number of the puzzle pack.
- 2) Tap once on the puzzle you want remove the data from.
- 3) Tap on the Cleanup Data button.
- 4) Tap on the Remove data for this pack button.

Support Information Services Copyright 1994, Apple Computer, Inc

Keywords: KNMP

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 15156