

## Newton Fax Modem: No Modem Connected Message (11/93

light.  3) Reset your Fax Modem by removing the batteries and disconnecting the AC adapter. Then replace the batteries and/or reconnect the AC adapter.  This will reset the internal modem circuitry. Your Fax Modem should now work.  Copyright 1993, Apple Computer, Inc.  Keywords: <none>  ===================================</none>	)Article Created: 15 November 1993
line. When I try to dial a phone number with the modem, my Newton displays the message "No Modem Connected."  What do I do now?  DISCUSSION	TOPIC
DISCUSSION  If you see the message "No Modem Connected" when you try to dial a phone number, follow these steps:  1) Reset your Newton by pressing its reset switch.  2) Check your Fax Modem's power source. If the battery status light (the red LED) is on, your batteries are low. Replace the batteries or connect the AC adapter.  Note: If the Fax Modem's batteries are completely discharged, the LED won't light.  3) Reset your Fax Modem by removing the batteries and disconnecting the AC adapter. Then replace the batteries and/or reconnect the AC adapter.  This will reset the internal modem circuitry. Your Fax Modem should now work.  Copyright 1993, Apple Computer, Inc.  Keywords: <none>  This information is from the Apple Technical Information Library.</none>	line. When I try to dial a phone number with the modem, my Newton displays
If you see the message "No Modem Connected" when you try to dial a phone number, follow these steps:  1) Reset your Newton by pressing its reset switch.  2) Check your Fax Modem's power source. If the battery status light (the red LED) is on, your batteries are low. Replace the batteries or connect the AC adapter.  Note: If the Fax Modem's batteries are completely discharged, the LED won't light.  3) Reset your Fax Modem by removing the batteries and disconnecting the AC adapter. Then replace the batteries and/or reconnect the AC adapter.  This will reset the internal modem circuitry. Your Fax Modem should now work.  Copyright 1993, Apple Computer, Inc.  Keywords: <none>  This information is from the Apple Technical Information Library.</none>	What do I do now?
number, follow these steps:  1) Reset your Newton by pressing its reset switch.  2) Check your Fax Modem's power source. If the battery status light (the red LED) is on, your batteries are low. Replace the batteries or connect the AC adapter.  Note: If the Fax Modem's batteries are completely discharged, the LED won't light.  3) Reset your Fax Modem by removing the batteries and disconnecting the AC adapter. Then replace the batteries and/or reconnect the AC adapter.  This will reset the internal modem circuitry. Your Fax Modem should now work.  Copyright 1993, Apple Computer, Inc.  Keywords: <none> </none>	DISCUSSION
2) Check your Fax Modem's power source. If the battery status light (the red LED) is on, your batteries are low. Replace the batteries or connect the AC adapter.  Note: If the Fax Modem's batteries are completely discharged, the LED won't light.  3) Reset your Fax Modem by removing the batteries and disconnecting the AC adapter. Then replace the batteries and/or reconnect the AC adapter.  This will reset the internal modem circuitry. Your Fax Modem should now work.  Copyright 1993, Apple Computer, Inc.  Keywords: <none>  This information is from the Apple Technical Information Library.</none>	
LED) is on, your batteries are low. Replace the batteries or connect the AC adapter.  Note: If the Fax Modem's batteries are completely discharged, the LED won't light.  3) Reset your Fax Modem by removing the batteries and disconnecting the AC adapter. Then replace the batteries and/or reconnect the AC adapter.  This will reset the internal modem circuitry. Your Fax Modem should now work.  Copyright 1993, Apple Computer, Inc.  Keywords: <none>  This information is from the Apple Technical Information Library.</none>	1) Reset your Newton by pressing its reset switch.
light.  3) Reset your Fax Modem by removing the batteries and disconnecting the AC adapter. Then replace the batteries and/or reconnect the AC adapter.  This will reset the internal modem circuitry. Your Fax Modem should now work.  Copyright 1993, Apple Computer, Inc.  Keywords: <none>  ===================================</none>	LED) is on, your batteries are low. Replace the batteries or connect the
adapter. Then replace the batteries and/or reconnect the AC adapter.  This will reset the internal modem circuitry. Your Fax Modem should now work.  Copyright 1993, Apple Computer, Inc.  Keywords: <none>  ===================================</none>	Note: If the Fax Modem's batteries are completely discharged, the LED won't light.
work. Copyright 1993, Apple Computer, Inc.  Keywords: <none>  This information is from the Apple Technical Information Library.</none>	
This information is from the Apple Technical Information Library.	work.
This information is from the Apple Technical Information Library.	
17700213 11.03.17.00	19960215 11:05:19.00

Tech Info Library Article Number: 13947