



Tech Info Library

Newton Messaging Card: Deleting Messages (1/94)

Article Created: 11 January 1994

TOPIC -----

I have received a number of pages (or messages) on my Newton MessagePad with the Newton Messaging Card.

How do I delete more than one page at a time from my MessagePad?

DISCUSSION -----

One method to delete multiple pages (or messages) at a time is to find all pages before or after a specific date, then delete all of the pages you found.

To do this, follow these steps:

- 1) Open the Pager application by tapping the Extras drawer, then tapping the Pager icon.
- 2) Tap Find to display the Find slip.
- 3) Tap Look for, then tap either "dates before" or "dates after". Since each page is time and date stamped, this will display a list of pages that were received either before or after the date you entered in the Find slip.
- 4) Tap the overview dot between the arrows at the bottom of the screen to display the selected list of pages.
- 5) Tap the Envelope icon at the bottom of the list, then tap Delete. All of the pages in the list will be deleted.

Copyright 1994, Apple Computer, Inc.

Keywords: <None>

=====
This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 14471