



# Tech Info Library

## AudioVision 14 Disp:Erratic Video SW Behavior (7/93)

Article Created: 29 July 1993

TOPIC -----

This article discusses the erratic video slider control (software controlled) behavior.

DISCUSSION -----

Pressing the Volume key, Mute button, or Microphone-on button in combination with the Brightness or the Contrast button makes the software slider control (in the video control panel) behave erratically.

For example, if you press and hold the top of the Contrast button to adjust the slider control upward AND press the Mute button at the same time, the slider control continues upward toward the end, even after the buttons have been released.

Copyright 1993, Apple Computer, Inc

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 12713