



Tech Info Library

StyleWriter Printers: All Printing appears backwards (2/97)

Article Created: 8 December 1994

Article Reviewed/Updated: 28 February 1997

TOPIC -----

My Color Stylewriter 2400 prints backwards. Everytime I print anything it comes out backwards on the paper.

DISCUSSION -----

Inside the print dialog, change the Paper Type from Back Print to one of the other paper options. The Back Print option is available on any Stylewriter printer using the following drivers:

- Color SW 2400
- Color SW 2500
- Color SW Pro
- Color SW 2200
- Stylewriter 1200
- Stylewriter 1500

Back Print is used with a special type of media that is similar to a transparency with a smoky film covering one side. When using Back Print film, the non-glossy side is printed on. The printing is backwards so that when you view the film from the glossy side, everything appears in the proper orientation.

Article Change History:
28 Feb 1997 - Added additional printers.

Copyright 1994-97, Apple Computer, Inc

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

ArticleID: TECHINFO-0016859

19970303 09:51:43.00

Tech Info Library Article Number: 16859