

Color StyleWriter 2200: White Lines at Bottom of Page (3/95)

Article Created: 4 March 1996
TOPIC
White horizontal lines appear when I print full page documents on my Color StyleWriter 2200. The lines only seem to appear during the last 0.8 inches at the bottom of the page. Is this normal?
DISCUSSION
White horizontal lines may appear when printing near the bottom 0.8 inches (2.00 cm) of each page because the majority of the paper has left the printer, leaving very little contact area with the paper feeding rollers. When this occurs, the paper can shift or advance slightly causing white gaps or lines.
The ReadMe file provided with each Color StyleWriter 2200 makes the following recommendations:
• If you see very thin stripes near the bottom of your printout, use your application program to make your bottom margin larger. A bottom margin of 0.8 inches or greater is best.
• For best results when printing envelopes, do not put images or text along the bottom edge of the envelope.
Copyright 1996, Apple Computer, Inc.
Keywords: <none></none>
=======================================
This information is from the Apple Technical Information Library.
19960305 07:36:05.00
Tech Info Library Article Number: 19438