



# Tech Info Library

## Configuring the ImageWriter to the Apple IIc

Both Imagewriters are shipped with their switch settings configured to work on the Apple IIc.

To work with the Apple IIc, the Imagewriter's switch settings should be:

```
SW1: 8 7 6 5 4 3 2 1
      | | | | |X|X| | | CLOSED
      |X|X|X|X| | |X|X| OPEN
```

Switch 5 of SW1 may be open when the Imagewriter is shipped)

```
SW2:      4 3 2 1
          | | |X|X| CLOSED
          |X|X| | | OPEN
```

The position of SW2's switch 4 doesn't matter, since it's unused.  
<None>

Keywords: <None>

-----  
This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 1153