

# Tech Info Library

# LaserWriter 12/640 PS: Duplex Unit Constantly Jams (6/96)

Article Created: 13 June 1996		
TOPIC		
I have a LaserWriter 12/640 PS printer am having a problem with paper constant can I correct this?		
DISCUSSION		
Make sure that the duplexer paper guide correctly. The instructions for install 133-141 of the LaserWriter 12/640 PS Us listed below for your convenience.	ling the duplex printing	g unit are on pages
Installing the Duplex Printing Unit		
With the optional duplex printing unit (often called duplex printing or two-sifrom the paper cassettes. You cannot duple the	ided printing). You can	only duplex print
Note: The duplex printing unit requires a mir instructions on adding printer RAM, see PS User's Guide.		
Begin_Table		
+=====================================	You need this much printer memory	 
Turn on PhotoGrade or use the duplex printing option	+=====================================	+    -
Turn on PhotoGrade and duplex print on all size paper (except legal)	+   20 МВ 	<del>*</del>    -
Turn on PhotoGrade and duplex print	24 MB	<del>-</del> 

on all size paper (including legal)

Follow these instructions for installing the LaserWriter 12/640 PS duplex printing unit.

Before you install the duplex printing unit:

- \* The printer must be turned off and the power cord unplugged.
- \* The printer must be disconnected from your computer or network.

The duplex printing unit adds approximately 2 inches to the height and 4 inches to the depth of the LaserWriter 12/640 PS. Begin by selecting a location for the LaserWriter 12/640 PS that provides enough room to accommodate the increased height and depth of the printer.

If you intend to keep the printer in its current location, make sure that adequate room will be available for opening the top cover and the duplex printing unit door, and maintaining the printer. You will also need to temporarily move the LaserWriter 12/640 PS from its current location to place the duplex printing unit in its place. When moving the printer, be sure to place it on a strong, flat, and, stable surface that can support its weight.

#### IMPORTANT:

You must remove the optional 500-sheet cassette and feeder from the LaserWriter 12/640 PS if it is already attached. The duplex printing unit must be installed between the LaserWriter 12/640 PS and the 500-sheet cassette and feeder. For instructions on removing the 500-sheet cassette and feeder, see "Removing the 500-sheet Cassette and Feeder" later in this chapter.

# Step 1

\_\_\_\_\_

Turn off and unplug the printer, and disconnect the network cables.

# Step 2

-----

Unpack the duplex printing unit and remove any packing materials. Set aside the small package of items.

# Step 3

----

Lift up the back end of the duplex printing unit and slide the metal brace onto the post.

The brace is located on the left side of the duplex printing unit near the back.

### Step 4

----

Unpack the duplex printing unit key.

Step 5

----

Remove the three covers located in the back of the printer. Remove the two top covers by inserting the key into the side of the covers and pushing gently on the key (the covers will snap off). Remove the bottom cover by inserting the key into the bottom side of the cover and pushing downward (you may need to use some force to remove this cover.)

#### IMPORTANT:

Be careful when removing the covers so that they do not fall inside the LaserWriter 12/640 PS.

#### Step 6

\_\_\_\_\_

Place the bottom cover and the duplex printing unit key in a safe place in case you need them in the future.

If you decide to remove the duplex printing unit, use the cover to prevent dust and other material from getting inside the printer.

#### Step 7

\_\_\_\_\_

Place the duplex printing unit where you want the LaserWriter 12/640 PS to be located

Orient the duplex printing unit so that its tray and the printer's multipurpose tray and paper cassette will be on the same side when the printer is attached.

#### Step 8

-----

Insert the paper guide for the duplex printing unit into the opening in back of the printer.

# Hint:

There are two tabs on the bottom of the paper guide that fit into slots in the back of the printer. When inserting the paper guide, slide it back and forth to easily locate these slots.

The paper guide helps direct the paper to the duplex printing unit.

#### Step 9

\_\_\_\_

Insert the locking connectors into the slots located on the bottom of the paper guide and push the connectors until they snap into place.

The locking connectors secure the paper guide to the printer.

# Step 10

\_\_\_\_\_

Lift the LaserWriter 12/640 PS, position it directly over the duplex printing unit and gently lower the printer until it sits evenly on the duplex printing unit.

As you lower the printer, align the corners of the printer directly over those

of the duplex printing unit.

#### Step 11

\_\_\_\_\_

Remove the cassette from the printer and the tray from the duplex printing unit.

# Step 12

-----

Insert the four locking connectors into the slots located on the front and back of the printer and duplex printing unit.

The locking connectors secure the printer to the duplex printing unit.

#### Step 13

\_\_\_\_\_

Insert the cassette into the printer and the tray into the duplex printing unit.

#### Step 14

\_\_\_\_\_

Gently close the duplex printing unit door until it latches into place against the printer. If the door does not close easily, check to make sure the brace is not locked in place.

#### Step 15

\_\_\_\_\_

Reconnect the power cable to the printer and reconnect the printer to the network, then turn on the printer.

# Step 16

\_\_\_\_\_

Configure your printer to use the duplex printing unit.

Copyright 1996, Apple Computer, Inc.

Keywords: <None>

\_\_\_\_\_\_

This information is from the Apple Technical Information Library.

19960617 16:22:27.00

Tech Info Library Article Number: 20013