

Tech Info Library

LaserWriter 16/600 PS: Setting the IP Address from Bootp (2/95)

Article Created: 1 February 1995		
TOPIC		
On the LaserWriter 16/600 PS printer an incorrect IP address (0.0.0.0) is printed on the start-up page. The printer can be printed too, and pinged but th IP address cannot be extracted with bootp (in one situation, the Ethernet hardware address from another device was being associated with the IP address of the LaserWriter). The only way to set the IP address was manually.		
DISCUSSION		
	ist of the configuration h BootP to the Laserwrit	files that used to set up the er 16/600.
#Make sure the IP add #BootP server config		"/etc/hosts" file and the the
grep printtest /etc/hosts 130.43.4.210 printtest		
#Set up the BootP se:	rver configuration file	
%more /etc/bootptab		
<pre>bf=bp.conf:\ hd=/etc:\ hn:\ ht=ether:\ vm=rfc1048:\ ha=1000E02B4 lp=130.43.4. gw=130.43.4.</pre>	210:\	
#Set up a configurat: # and the intended I		r's Ethernet MAC address
<pre>%more /etc/bp.conf # printer_name</pre>	ethernet_address	IP_address
π Princer_name	Concentrate Canal Cas	11 _4441 CDD

testprint 10:00:e0:2b:45:31 130.43.4.210

#To see whether BootP server takes its configuration file or not
%tail /usr/adm/syslog

Jan 25 15:42:31 hp715 bootpd[1341]: reading "/etc/bootptab"
Jan 25 15:42:31 hp715 bootpd[1341]: read 1 entries from "/etc/bootptab"
Jan 25 15:53:24 hp715 bootpd[1374]: bootpd 2.1 #1.16.193.3: Wed Jul 7

#IP configuration for the BootP server
%ifconfig lan0

lan0: flags=63<UP,BROADCAST,NOTRAILERS,RUNNING>
 inet 130.43.4.220 netmask ffffff00 broadcast 130.43.4.255

#Please make sure that BootP services are entered and running:

#/etc/services

bootps 67/udp # Bootstrap Protocol Server bootpc 68/udp # Bootstrap Protocol Client

Support Information Services Copyright 1995, Apple Computer, Inc

Keywords: hts

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 17097