



Tech Info Library

LaserWriter 16/600: Printing From UNIX, Troubleshooting (3/95)

Article Created: 22 March 1995

TOPIC -----

The files I send to my LaserWriter 16/600 PS are not being printed, or they are not being printed correctly. How can I correct this?

DISCUSSION -----

The first thing to check is the LaserWriter setup. UNIX administrators know how to set up the /etc/printcap file, but they assume the printer does not need configuration for text.

The LaserWriter 16/600 PS defaults to PostScript as the TCP/IP mode, however, PostScript cannot handle text files. PCL5 handles text files, so the TCP/IP mode should be changed to PCL5. If PostScript is also expected from this printer, choose AutoSelect. Here are the instructions:

Step 1

Move the configuration switch located above the Parallel port on the back of the printer to the up position.

Step 2

Launch the Apple Printer Utility.

Step 3

Open the Communication Configuration category.

Step 4

Open the Up Switch Position category (Custom)

Step 5

Set the TCP/IP mode to AutoSelect

Step 6

Press the Send button

Also check the /etc/printcap file. Follow the example on page 125 of the "Apple LaserWriter 16/600 PS: Setting Up, Connecting, and Using Your Printer" manual that came with your LaserWriter 16/600 PS. More specifically, check the type to which "rp" is set. If "rp=text" and the printer is not working correctly, try

"rp=raw", or visa-versa.

More in-depth information on setting up the /etc/printcap file can be found in the Tech Info Library article "LaserWriter 16/600 PS & Sun Solaris Through TCP/IP".

Support Information Services
Copyright 1995, Apple Computer, Inc.

Keywords: knts

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 17408