



# Tech Info Library

## LW 16/600 and 12/600: Install Drivers on Windows NT (12/95)

Article Created: 17 July 1995

Article Reviewed/Updated: 5 December 1995

TOPIC -----

This article explains how to install the LaserWriter 16/600 PS and Color LaserWriter 12/600 PS drivers on Windows NT 3.5.

DISCUSSION -----

### Step 1

-----

From Windows NT 3.5, choose Create Printer from the Print Manager's Printer menu. The Create Printer dialog box appears.

### Step 2

-----

Select Other (at the bottom of the list) in the Driver Combo box.

### Step 3

-----

Insert the Apple Windows Printer Disk 2 into the floppy disk drive.

### Step 4

-----

Verify that the correct floppy drive is indicated in the Install Driver dialog box and click OK. A list of printer drivers appears.

### Step 5

-----

Select the printer driver that corresponds to your printer and click OK.

### Step 6

-----

Follow the instructions on the screen. If you are installing software from the Windows NT 3.5 CD, you may need to type the path for your driver location. The path may be similar to this:

"c:\windows\system32\spool\drivers\w32x86\1\".

Click Continue and OK to complete the installation.

### Step 7

-----

If you are installing Windows NT 3.5 software from floppy disks, you copy the following files (followed by their locations) to the path of your driver location:

- PSCRIPTUI.DLL (Disk 13)
- PSCRIPT.DLL (Disk 13)
- PSCRIPT.HLP (Disk 18)

Article Change History:

- 05 Dec 1995 - Included Color LaserWriter 12/600 PS.
- 08 Aug 1995 - Reformatted for readability.

Support Information Services  
Copyright 1995, Apple Computer, Inc.

Keywords: kwindows

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 18182