



# Tech Info Library

## LW IIf and IIg: Printing from a DOS computer (11/95)

Article Created: 25 June 1993

Article Reviewed/Updated: 2 November 1995

TOPIC -----

Can you explain how to print from a DOS computer to a LaserWriter IIf or IIg?

DISCUSSION -----

Follow these steps:

1) Create the following mode statements to the auto exec.bat:

```
mode com1:9600,n,8,1
```

```
mode lpt1:=com1:
```

These will redirect the print command to com1.

2) Verify that the thumbwheel (printer select switch) is set to either 0 or 5, this assumes you are going to print PostScript to the LaserWriter IIf. If you are going to print HP emulation, then set the thumbwheel to 1.

3) Verify the proper cable is being used. Here are the pinouts for two different cables:

Begin\_Table

IBM RS-232 Serial  
(DB-25 Female Connector )

LaserWriter  
(DB-25 Male Connector)

(SG) 1	-----	1 (SG)
(TXD) 2	-----	3 (RXD)
(RXD) 3	-----	2 (TXD)
(RTS) 4	-----	5 (CTS)
(CTS) 5	-----	4 (RTS)
(DSR) 6	-----	8&20(DCD/DTR)
(GND) 7	-----	7 (GND)
(DCD/DTR)8&20	-----	6 (DSR)

IBM RS-232 Serial

LaserWriter

(DB-9 Female Connector)

(DB-25 Male Connector)

(CD)	1	-----	4	(RTS)
(RXD)	2	-----	2	(TXD)
(TXD)	3	-----	3	(RXD)
(DTR)	4	-----	5&6	(CTS/DSR)
(SG)	5	-----	7	(SG)
(DSR/CTS)	6&8	-----	20	(DTR)
(RTS)	7	-----	8	(DCD)
(RI)	9	-----		not connected

End\_Table

At this point, the printer is properly configured, has the proper cable, and the PC has the appropriate mode statements to direct printing to the serial port.

Try printing a directory by copying the contents of the directory to lpt1. You can't do a printscreen because "lpt1" is not a PostScript command and the printer will not understand it.

Article Change History:

02 Nov 1995 - Updated pinout table, reformatted for the World Wide Web.

Support Information Services

Copyright 1993-95, Apple Computer, Inc

Keywords: supt

=====  
This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 12470