



# Tech Info Library

## LaserWriter Select 360: Paper-Out Lit With Envelope Tray (3/94)

Article Created: 8 March 1994

TOPIC -----

When the optional envelope tray is attached to the LaserWriter Select 360 and I try to print, the Paper-Out LED comes on. This doesn't occur using the manual envelope feed.

How can I fix this?

DISCUSSION -----

There is no option in the Page Setup menu to select the envelope cassette. If Universal Cassette is selected you get the paper out indication. You must select Auto Select in the Page Setup menu. You must do this because the software looks at what type of paper is being selected in the Page Setup and checks each cassette until it finds that size paper.

In order to print an envelope with the optional envelope tray on the LaserWriter Select 360, follow these steps:

- 1) Open the application program
- 2) Choose Page Setup from the File menu
- 3) Select envelope size (Comm 10 for business envelopes)
- 4) Select Landscape
- 5) Select OK
- 6) Choose Print from the File menu
- 7) Select Auto Select
- 8) Select Print

Support Information Services  
Copyright 1994, Apple Computer, Inc.

Keywords: hts

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 14828