



Tech Info Library

LaserWriter Select 360: Fax Dates & Times Incorrect (2/97)

Article Created: 23 March 1994

Article Reviewed/Updated: 21 February 1997

TOPIC -----

On all the faxes I send or receive, the time and date is incorrect. The year is always set to 1980 and the time does not change. How can I correct this?

DISCUSSION -----

The optional fax card for the LaserWriter Select 360, uses a clock chip with a 3.6 volt lithium battery. If the fax card was shipped without setting the time and date, then it must be set before the clock starts keeping time. The LaserWriter Fax Utility allows you to set the date and time.

If the fax card contains a dead battery, then you could set the proper time and date, but the card would continually lose the time and date. If this happens, you need to replace the battery (service part number 742-0011*).

***NOTE:**

Service parts can only be ordered by authorized Apple Service technicians. These parts are not available to the general public because only authorized Apple technicians are approved to install them.

The part numbers mentioned in this article are accurate as of this writing. Before ordering or inquiring about an order, you need to verify the number is still correct, as they are subject to change.

Article Change History:

21 Feb 1997 - Added info about part number.

Copyright 1994-97, Apple Computer, Inc

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

ArticleID: TECHINFO-0014983

19970224 09:14:41.00

Tech Info Library Article Number: 14983