



# Tech Info Library

## LaserWriter Select: Indicator Lights (2/93)

Article Created: 9 February 1993

TOPIC -----

This article describes the function of the indicator lights on the LaserWriter Select 300 and LaserWriter Select 310 .

DISCUSSION -----

The LaserWriter Select 300 and 310 have three indicator lights that indicate printer status. Each light has an icon below it to describe its function.

- On the left is the Ready/In Use indicator. Its icon is a circle.
- In the middle is the Paper Out indicator. Its icon is a horizontal rectangle with the top right corner turned down.
- On the right is the Paper Jam indicator. Its icon is two rollers with a jagged line between them.

The table below adds further details.

Indicator Color	Name	Function
-----	----	-----
GREEN	Ready/In Use	ON when the printer is ready to print.  FLASHES when the printer is not ready to print due to warm-up (WAIT status).  FLASHES while the controller is preparing data for printing.  OFF when the printer is not ready to print due to an error condition.

AMBER                      Paper Out              ON when printer status indicates  
paper out in CASSETTE FEED mode  
or MULTI-PURPOSE TRAY mode.

OFF otherwise.

AMBER                      Paper Jam                ON when printer status indicates  
paper jam.

OFF otherwise.

If both the Paper Out and Paper Jam lights flash continuously,  
contact an Authorized Apple Service Provider.

Copyright 1993, Apple Computer, Inc.

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 11511