

Personal LaserWriter NT: Spurious Paper-Out Light

Article Created: 19 April 1991 Article Last Reviewed: Article Last Updated:

TOPIC -----

I'm having a problem with a Personal LaserWriter NT. At power-up, with nothing connected to the printer, all three LEDs come on briefly, then they go out, and the paper-out LED starts flashing.

The manual indicates this means the printer is waiting for manual-feed paper, but obviously it shouldn't be. The engine test prints a normal test sheet.

DISCUSSION -----

It sounds like the I/O board needs replacing, especially if you can get a good engine self-test out of the printer. We recommend replacing the board for test purposes. Copyright 1991 Apple Computer, Inc.

Keywords: <None>

This information is from the Apple Technical Information Library.

19960215 11:05:19.00 Tech Info Library Article Number: 7650