



Tech Info Library

Personal LaserWriter NTR: Parallel Pin-outs

Article Created: 24 July 1992

Article Last Reviewed:

Article Last Updated:

TOPIC -----

I need the exact pin-outs for the parallel port on the Personal LaserWriter NTR.

DISCUSSION -----

The information is on page 88 (Appendix B) of the "Personal LaserWriter NTR User's Guide", which comes with the Personal LaserWriter NTR. Here are the pin-outs for the Centronics-type parallel port of the Personal LaserWriter NTR:

Pin	Description
1	Data Strobe
2	Data 1
3	Data 2
4	Data 3
5	Data 4
6	Data 5
7	Data 6
8	Data 7
9	Data 8
10	Acknowledge
11	Busy
12	Paper error
13	Select out
14	Autofeed
15	Select in
16	Signal ground
17	Chassis ground
18	None
19-30	Signal ground
31	Prime
32	Fault
33-36	None

Copyright 1992, Apple Computer, Inc.

Keywords: <None>

=====
This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 10480