

## LaserWriter: Using non-AppleTalk connectors with AppleTalk

With the Macintosh Plus, use the Macintosh Peripheral Cable, M-0185, and connect the 9-Pin end of the M-0185 to the LaserWriter and the Mini-8 end to the Macintosh Plus printer port.

To connect a single Macintosh or Macintosh XL to a LaserWriter without using the AppleTalk connector modules, construct a new cable using the following pinouts:

Macintosh Plus	Macintosh	Macintosh XL	Signal	LaserWriter	Signal
Mini-Circular 8	DB-9	DB-25		DB-9	
4	3	1	GND	3	GND
6	4	20	TXD+	8	RXD+
3	5	2	TXD-	9	RXD-
8	8	9	RXD+	4	TXD+
5	9	3	RXD-	5	TXD-

Set the LaserWriter's mode switch for "AppleTalk", use the control panel to "Connect" AppleTalk, and use "Chooser" to select the LaserWriter.

CAUTION! To avoid FCC Class B signal violation, this cable should be fully shielded, as the data is at a very high rate and is not attenuated by the connection boxes normally used in AppleTalk. Apple Technical Communications

Keywords: <None>

\_\_\_\_\_

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 1664