



Tech Info Library

Daisy Wheel Printer: Configuring it for all Apples (10/94)

Article Created: 04 December 1984

Article Reviewed/Updated: 13 October 1994

TOPIC -----

What are the configuration settings for the Apple Daisy Wheel Printer for all Apple systems?

DISCUSSION -----

Below are the switch settings for configuring a Daisy Wheel Printer to any Apple computer. (NOTE: To get at the switches in the rear of the printer, you must use a screwdriver to remove the top cover.)

System	Rear Panel Switches		Front	Cable Required (see key below)
	SW-1 12345678	SW-2 12345678	Switches 12345678	
Apple III	11100111	00001001	10000100	A+B
Macintosh	N/A	N/A	N/A	N/A
Lisa	11100111	00001001	10000100	A+B
Apple IIc	11100111	00001001	10000100	C*
Super Serial	11100111	00001001	10000100	B
High Speed Serial	00100111	00001001	10000100	B

Switch Setting Key: 0 = off = open; 1 = on = closed

Cable Key:

Letter	Part number	Comments
A	590-0029-00	Modem Eliminator
B	590-0037-B	DB-25 Pin to pin (1-8, 12, 13, 19, 20)
C	590-0191-A	5-pin DIN to DB-25

The pinouts for these cables are contained in separate articles in AppleLink's Technical Information Library.

* - Using default port settings

Apple III Driver, data configuration block:

 0 1 2 3 4 5 6 7 8 9 A B
RS-232 0E 00 10 10 10 00 13 11 DF 84 50 80
Printer 0E 00 10 10 10

Super Serial Card Configuration:

 1 2 3 4 5 6 7
SW1 Off Off Off On Off On On
SW2 On On Off Off On Off Off

Jumper block should be pointing towards terminal.

Article Change History:

13 Oct 1994 - Reviewed for technical accuracy, revised formatting.

Support Information Services
Copyright 1984-94 Apple Computer, Inc.

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 1044