

Portable StyleWriter: Manual Feed (7/93)

Article Created: 13 July 1993

TOPIC -----

This article discusses how to load envelopes or other material in the Portable StyleWriter.

DISCUSSION -----

You can load one envelope, transparency, or sheet of stock paper in the printer for a manual feed. The printer should be turned on, with the Power and Error lights lit.

- 1) Position the printer for vertical operation by rotating the footer on the back of the printer case.
- 2) Open the top cover.
- Set the paper thickness adjustment dial in the correct position. The thumbwheel is located on the right bottom of the printer. For example: Set the dial to the envelope icon if you will be printing on an envelope.
- Align/insert the envelope or sheet into the slot on the back of the printer.
 - NOTE: The printer prints on the side of the envelope or sheet that faces up.
- Press the LF/FF button to feed the material into the printer. The Error light turns off.

5) Press the On Line button to make the printer ready for printing. Copyright 1993, Apple Computer, Inc

Keywords: <None>

This information is from the Apple Technical Information Library.

19960215 11:05:19.00 Tech Info Library Article Number: 12600