

## Portable StyleWriter: Pitch Button Not Used (3/94)

Article Created: 24 March 1994
TOPIC
The pitch button is not mentioned in the manual, how do I use it?
DISCUSSION
The pitch button is not used on the Portable StyleWriter, so it is not covered in the manual.
Support Information Services Copyright 1994, Apple Computer, Inc
Keywords: <none></none>
This information is from the Apple Technical Information Library.
19960215 11:05:19.00
Tech Info Library Article Number: 15013