



Tech Info Library

StyleWriter: Printing Gets Lighter Problem

Article Created: 13 August 1991

Article Last Reviewed:

Article Last Updated:

TOPIC -----

I use a StyleWriter printer.

When I print a self-test, the print is dark. When I then print from the computer, the print gets continuously lighter.

What can I do?

DISCUSSION -----

1. Purge the ink cartridge
2. Make sure you're using 16 lb. to 24 lb. bond paper.
3. Make sure forms-thickness lever is set in the UP position.
4. Replace the ink cartridge.

Copyright 1991 Apple Computer, Inc.

Keywords: <None>

=====
This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 8644