

StyleWriter: Manual-Feed Printing

Article	Creat	ed:	26	March	1992
Article	Last	Revi	Lewe	ed:	
Article	Last	Upda	ated	1:	

TOPIC -----

I'm having a problem printing manual-feed jobs on my StyleWriter printer, even though I'm using the standard manual-feed process:

- 1) Choose Print from the File menu.
- 2) Select the manual-feed option.
- 3) Click the "Print" button.
- 4) Wait for the dialog box saying to "Insert next sheet of paper."

When I insert the paper, I get an error, and the job doesn't print.

DISCUSSION -----

When using the manual-feed option with the StyleWriter, you need to deselect the printer before you insert the paper and then reselect it to print.

Follow these steps for printing manual-feed jobs on the StyleWriter:

- 1) Choose Print from the File menu.
- 2) Select the manual-feed option.
- 3) Click the "Print" button.
- 4) Wait for the dialog box saying to "Insert next sheet of paper."
- 5) Press the StyleWriter "Select" button to deselect the printer.
- 6) Insert the sheet (or envelope). The StyleWriter advances the paper about 1/2 inch.
- 7) Press the StyleWriter "Select" button again to reselect the printer.

8) Click "OK" in the dialog box to start the print job. Copyright 1992 Apple Computer, Inc.

Keywords: <None>

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 10033